

Figure 2

Figure 1

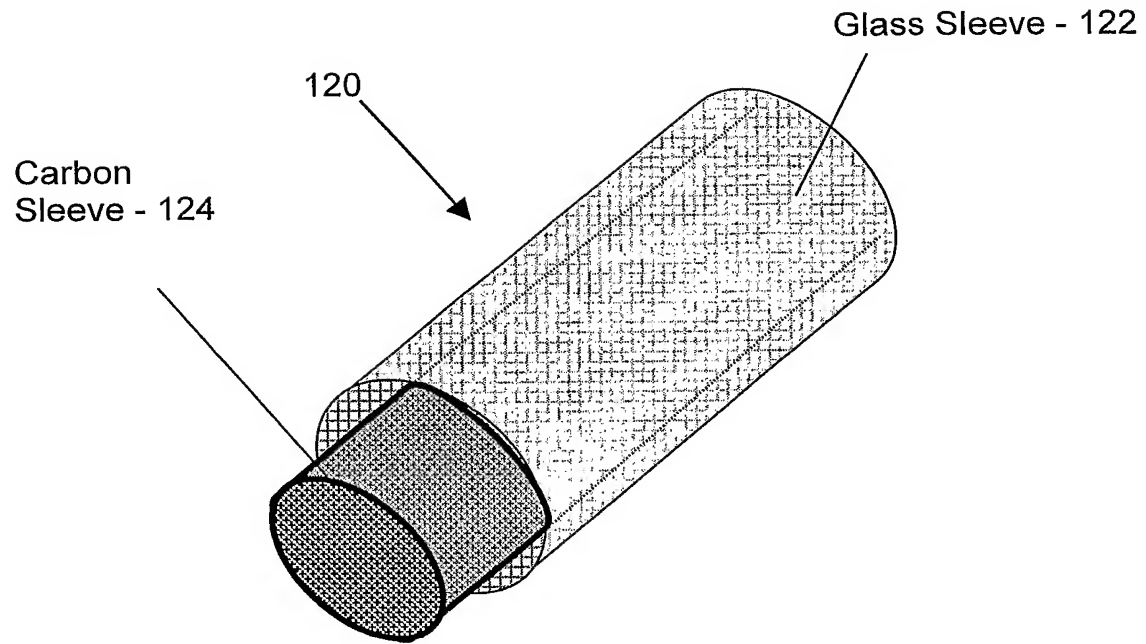


Figure 2a

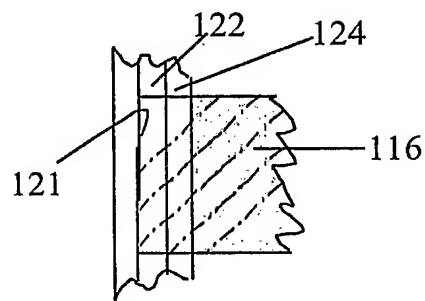


Figure 2b

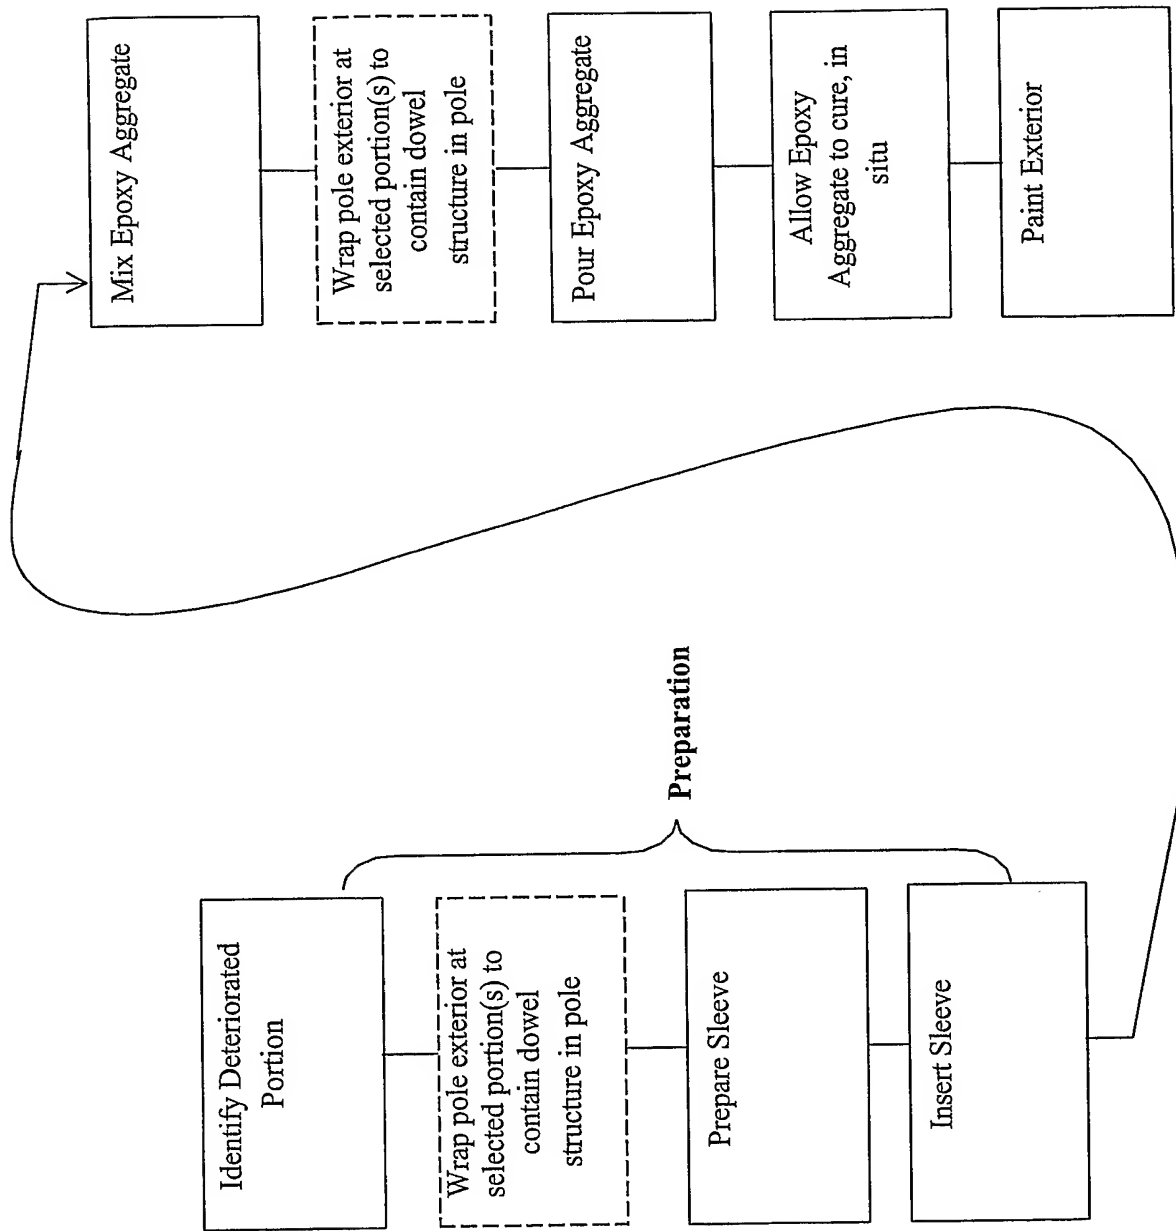


Figure 3b

Figure 3a

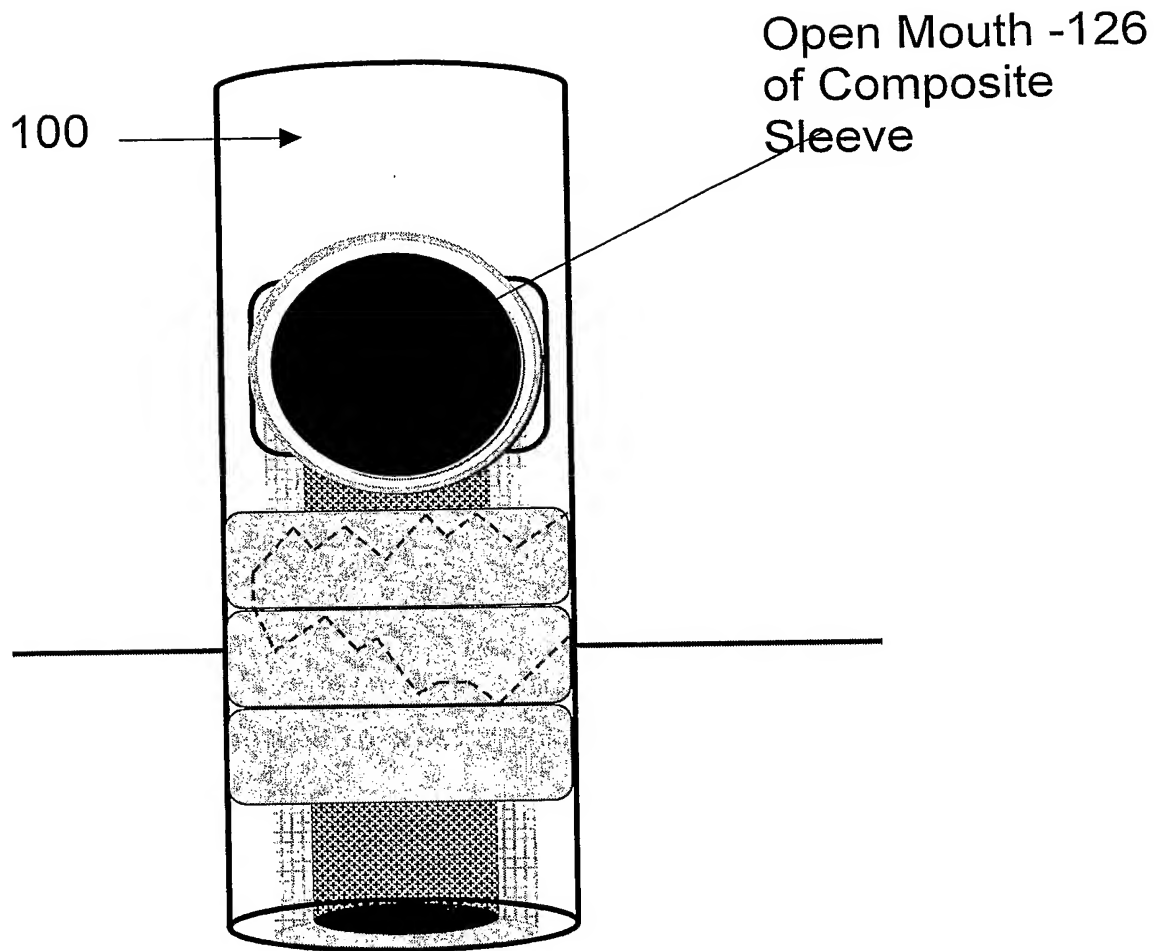


Figure 4

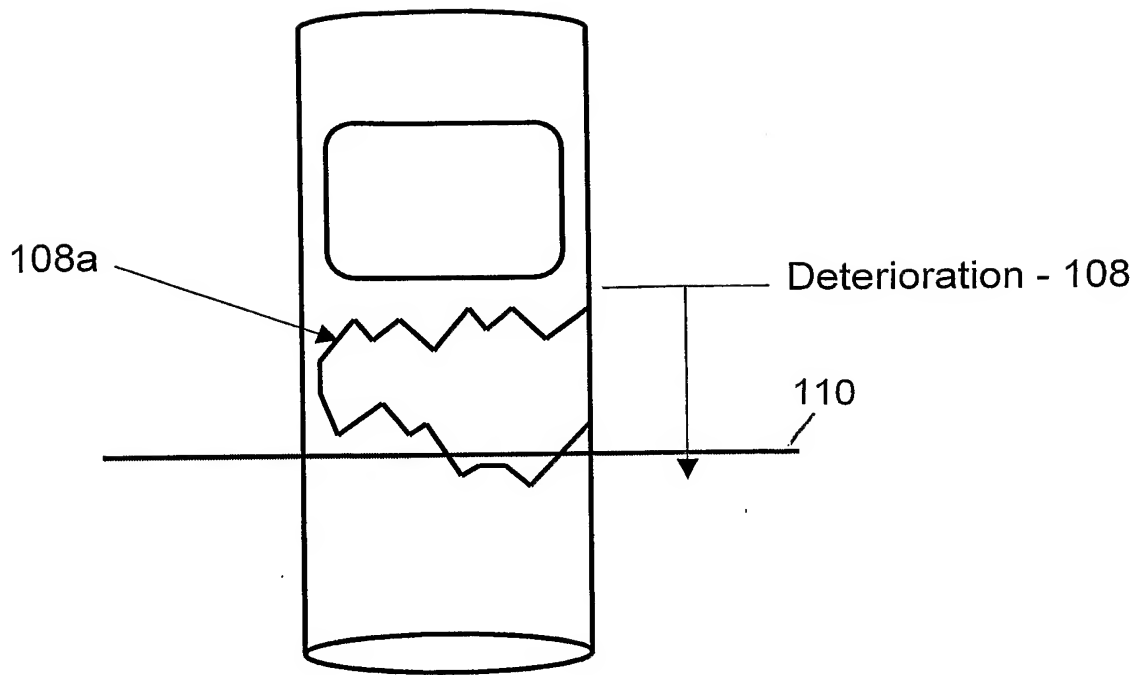


Figure 5a – Inspection

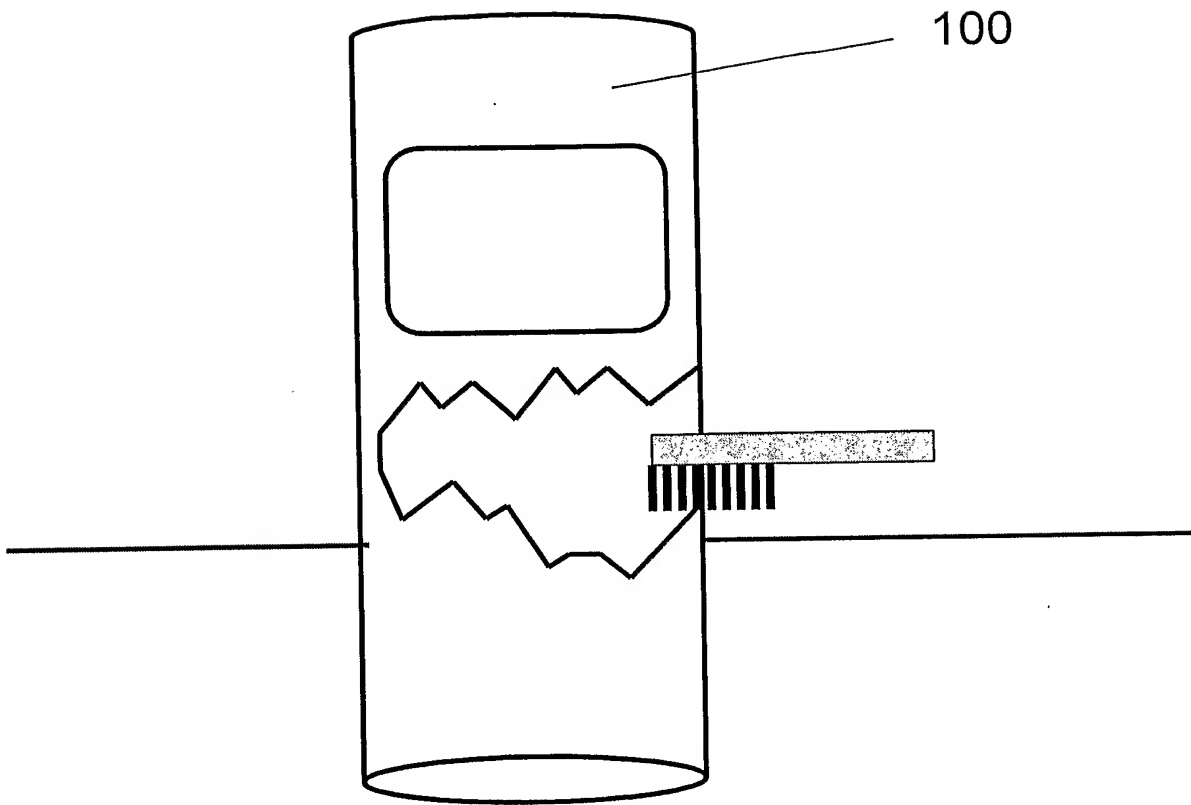


Figure 5b – Clean Pole Surface

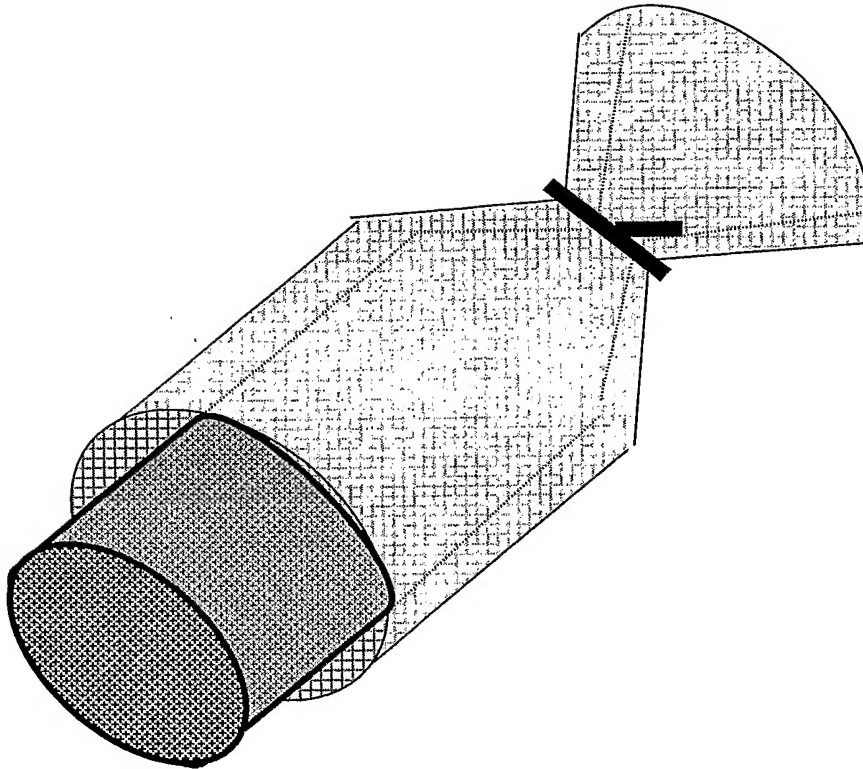


Figure 5C – Tie off end of sleeve at the bottom with a zip tie

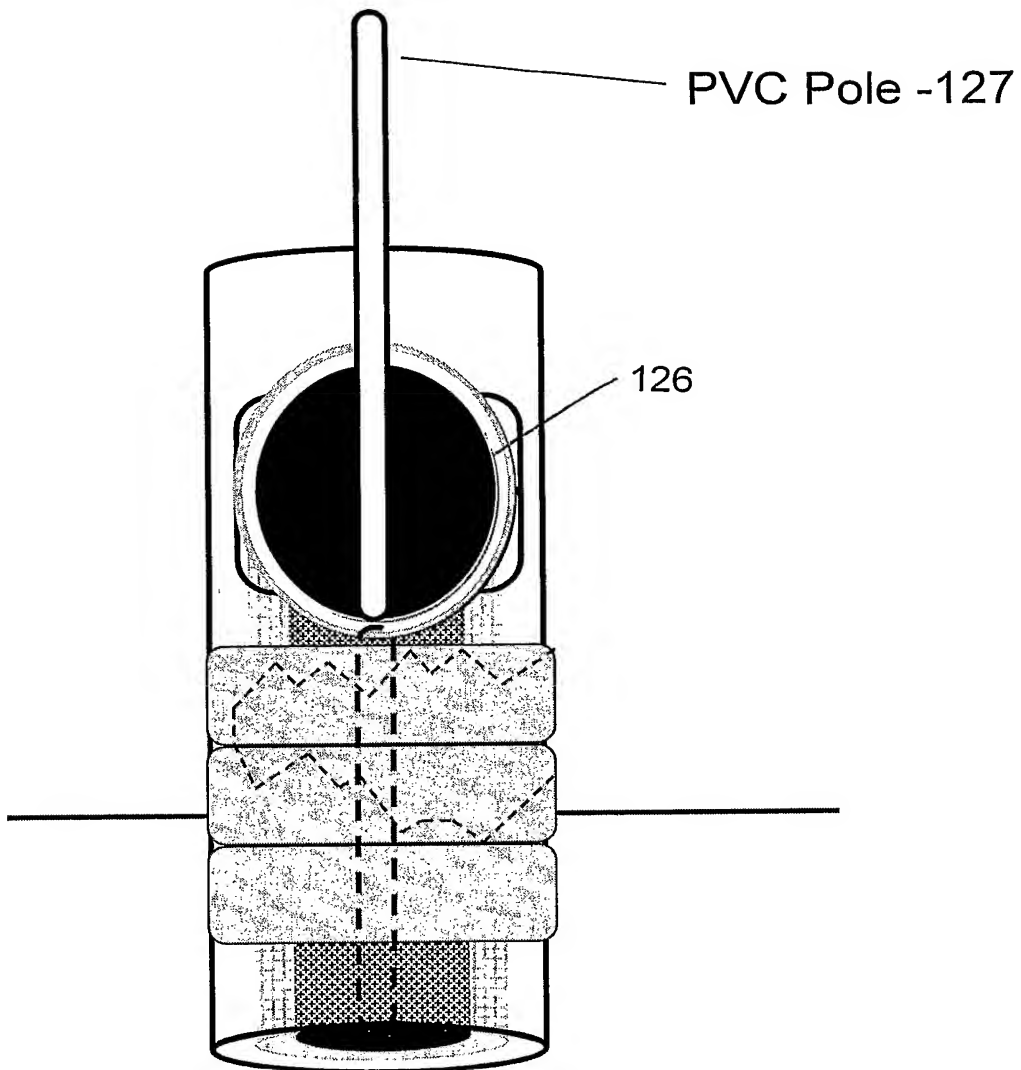


Figure 5d – Insert Fabric Sleeve



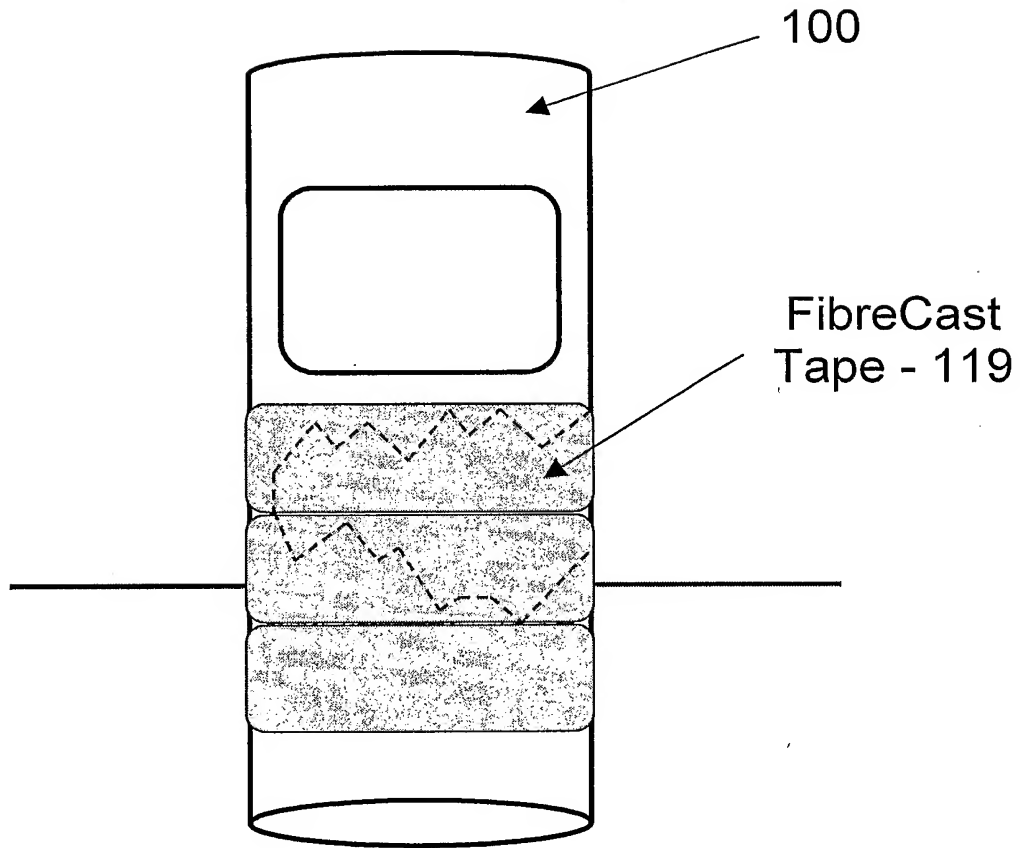


Figure 5e – Wrap Pole

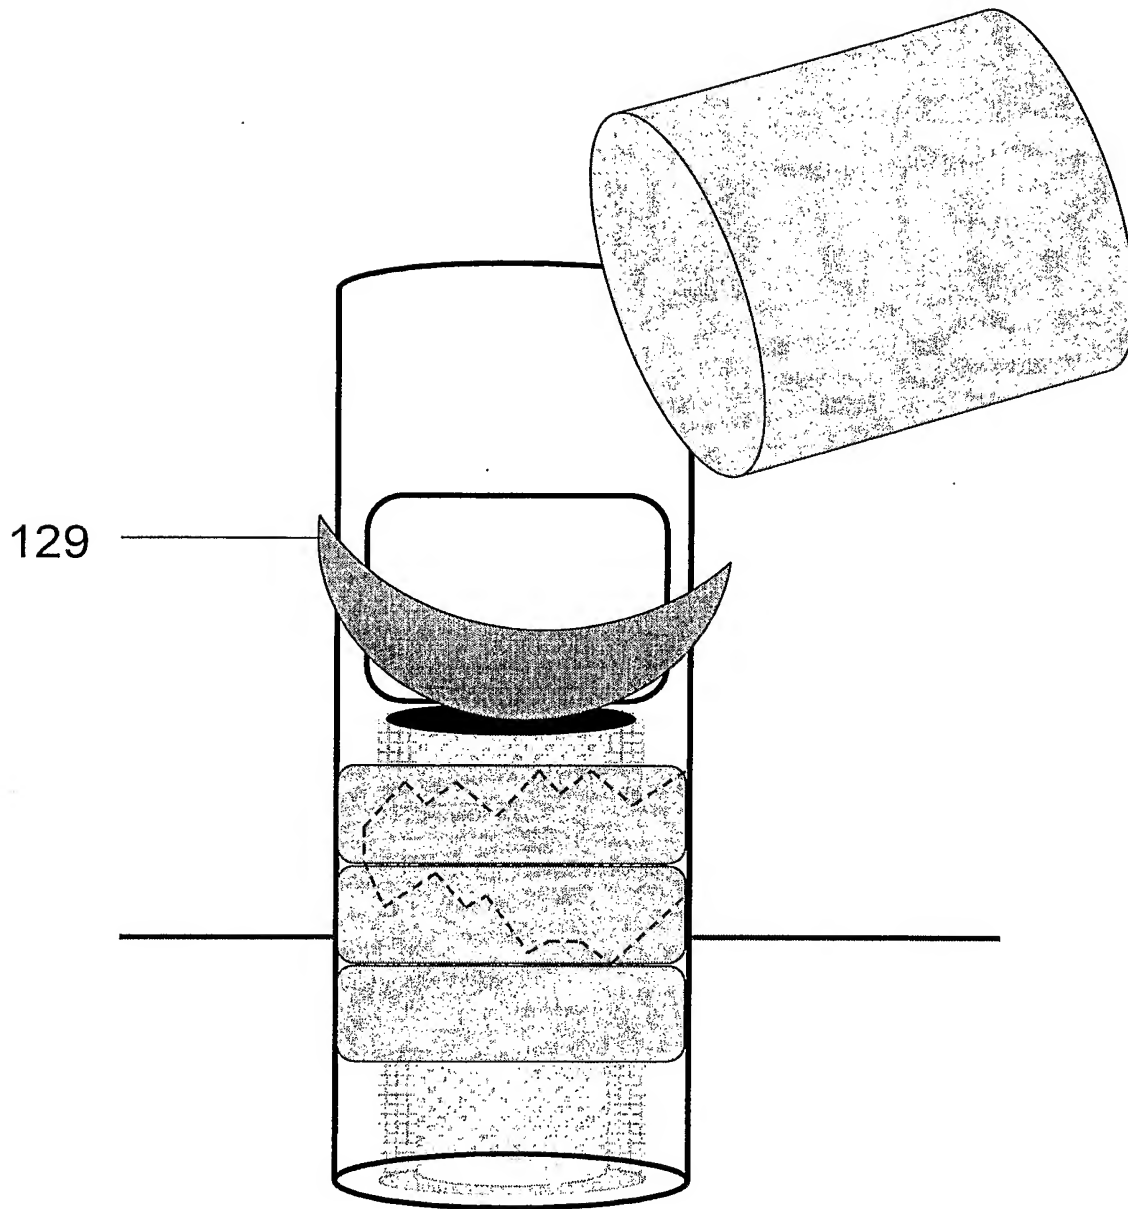


Figure 5f – Pour Epoxy Resin Aggregate

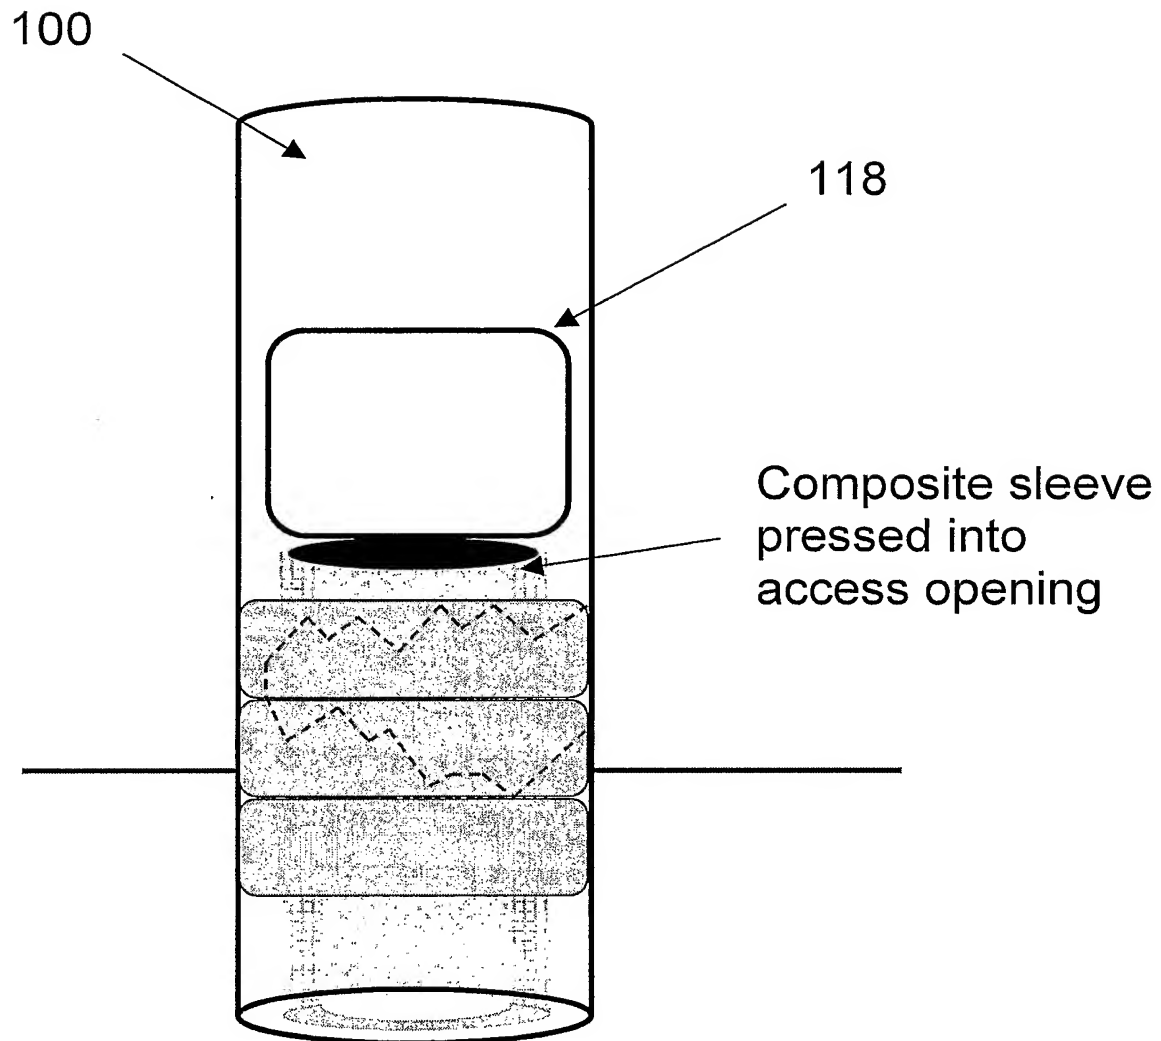


Figure 5g – Epoxy Resin Filled

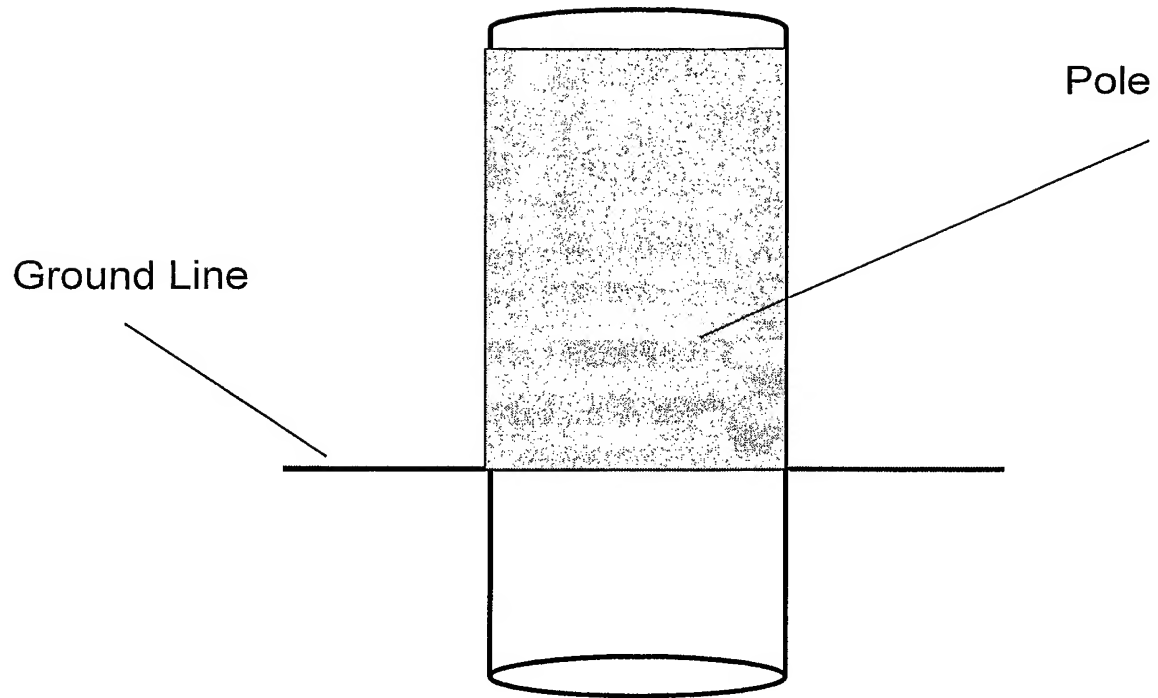


Figure 5h – Paint Pole

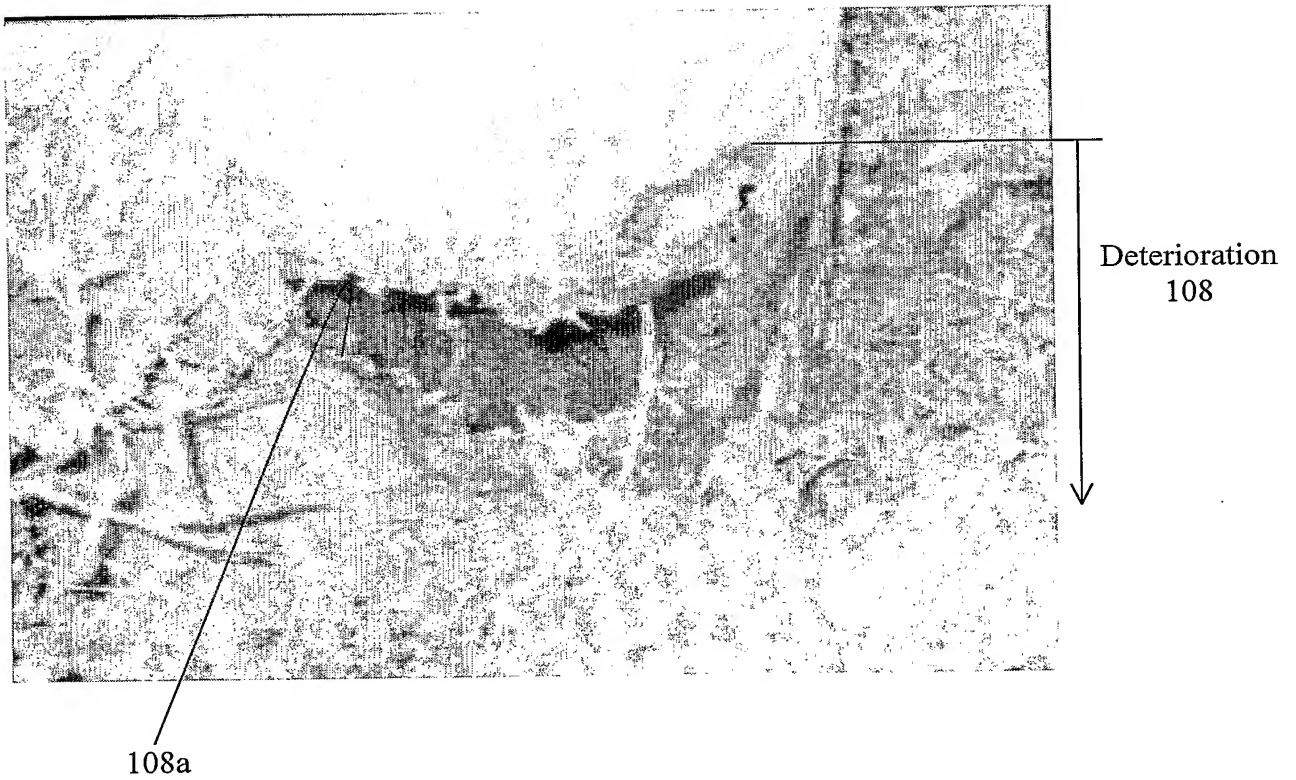


Exhibit 1a

Step 1:  
Inspection

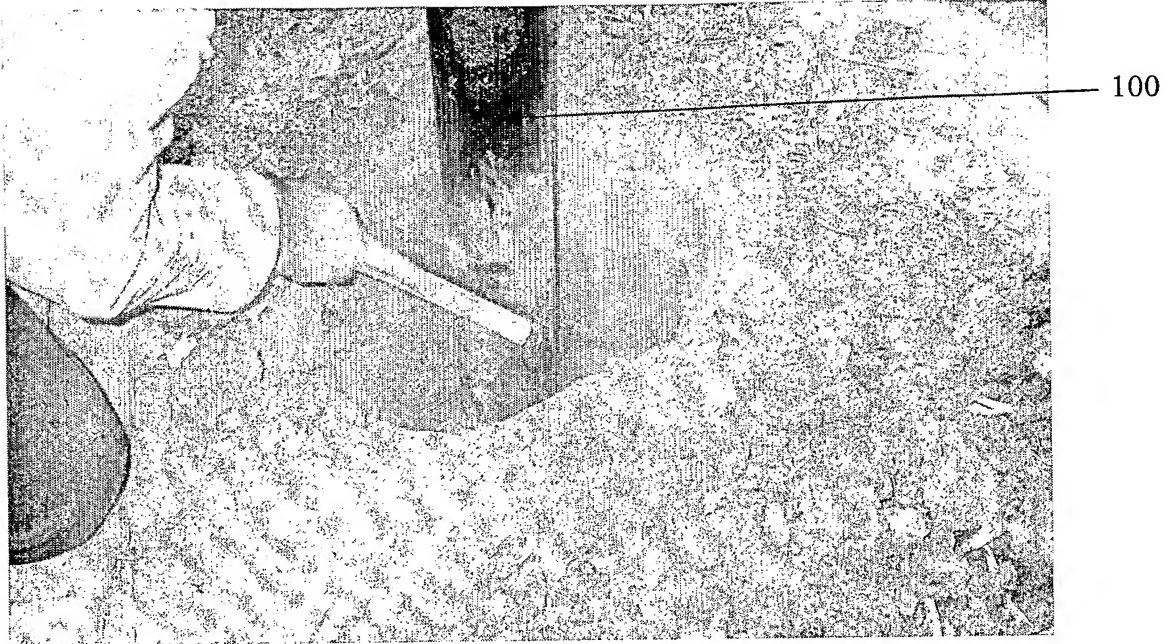


Exhibit 1b

Step 2:  
Clean Pole Surface

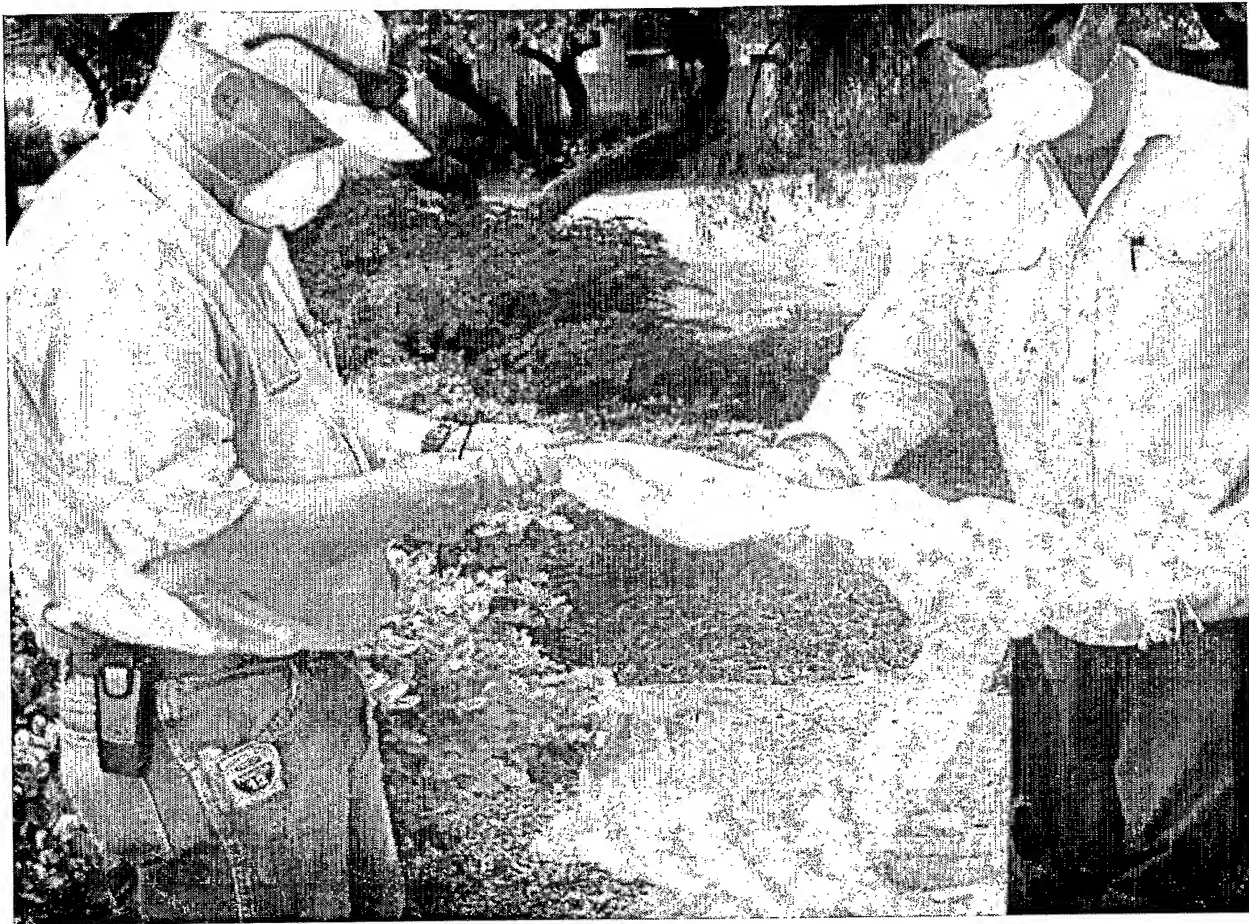


Exhibit 1c

Step 3:  
Tie off end of sleeve at the bottom with a zip tie

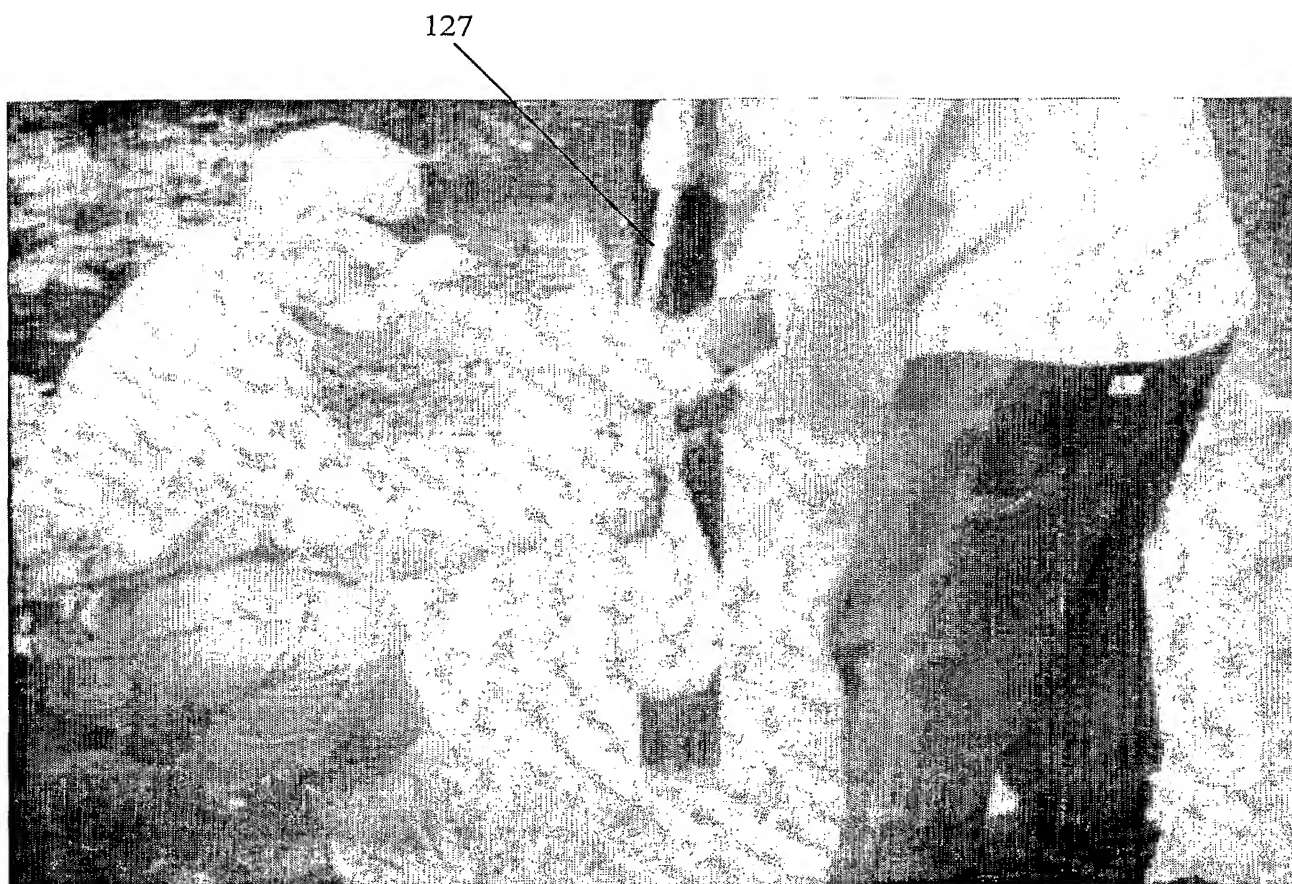


Exhibit 1d


Step 4:  
Insert Fabric Sleeve





Exhibit 1e

Step 5:  
Wrap Pole

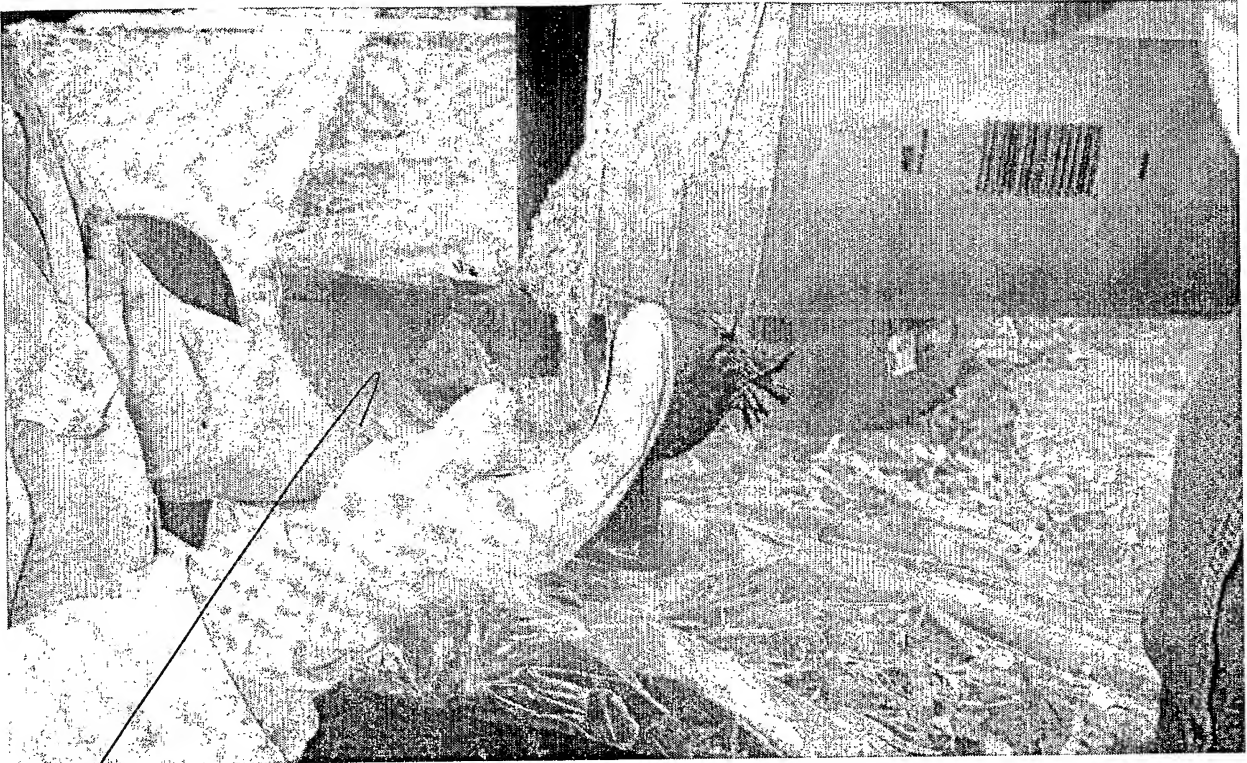

129

Exhibit 1f

Step 6:  
Pour Epoxy Resin Aggregate

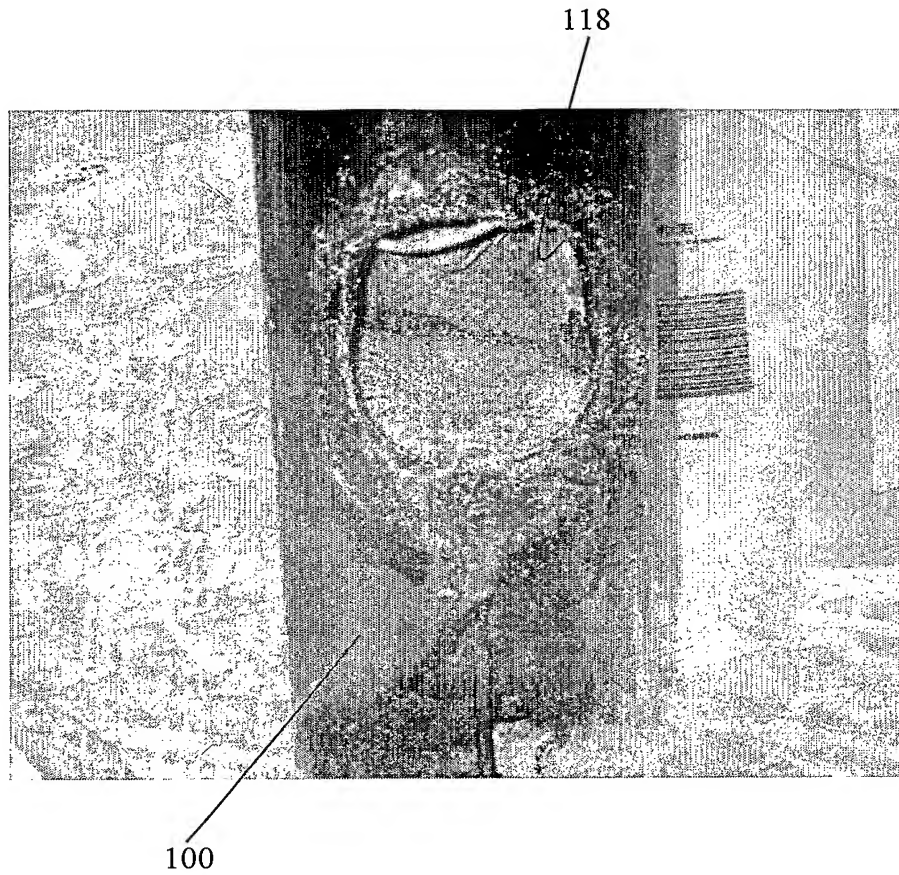


Exhibit 1g  
Epoxy Resin Filled

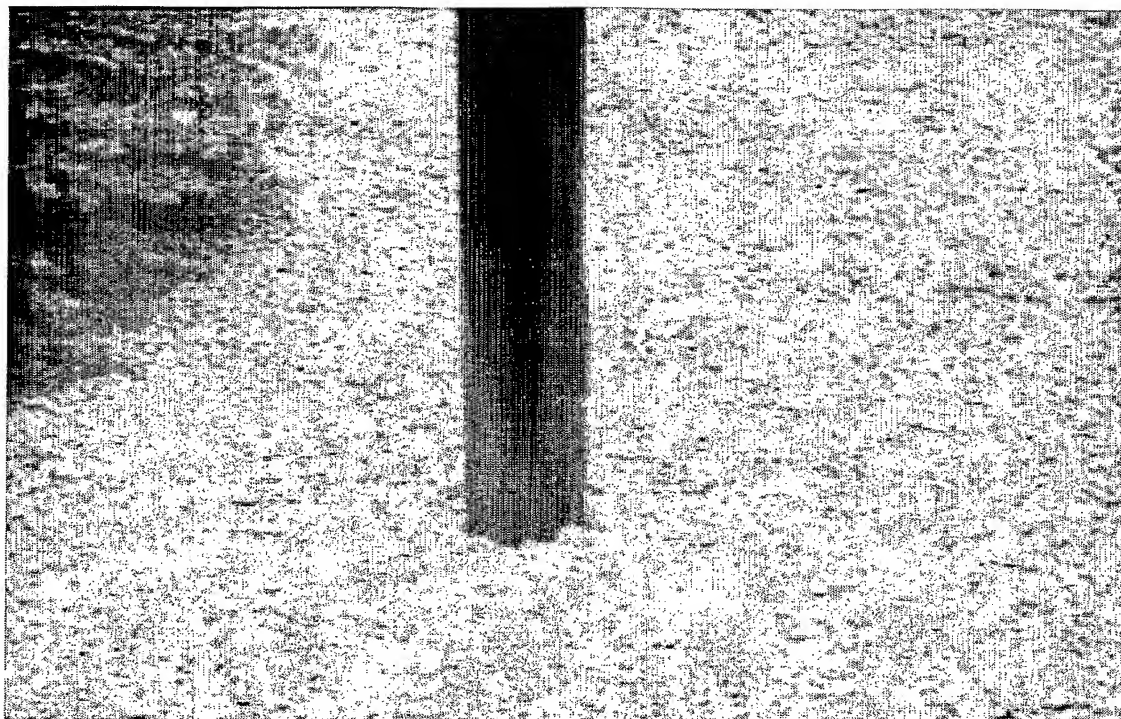


Exhibit 1h

Step 7:  
Paint Pole



Exhibit 2a